


Upright furniture

For upright construction, the sides of the furniture piece are fitted with two vertical and one horizontal upright. Uprights and sides are connected with tongues, so that the sides can be pushed up into the thus created U. The vertical and horizontal uprights are connected with a decorative corner joint, the Halved Dovetail Corner. As the sides are flush with the inner edge of the upright, the corners of the shelves do not need to be notched.

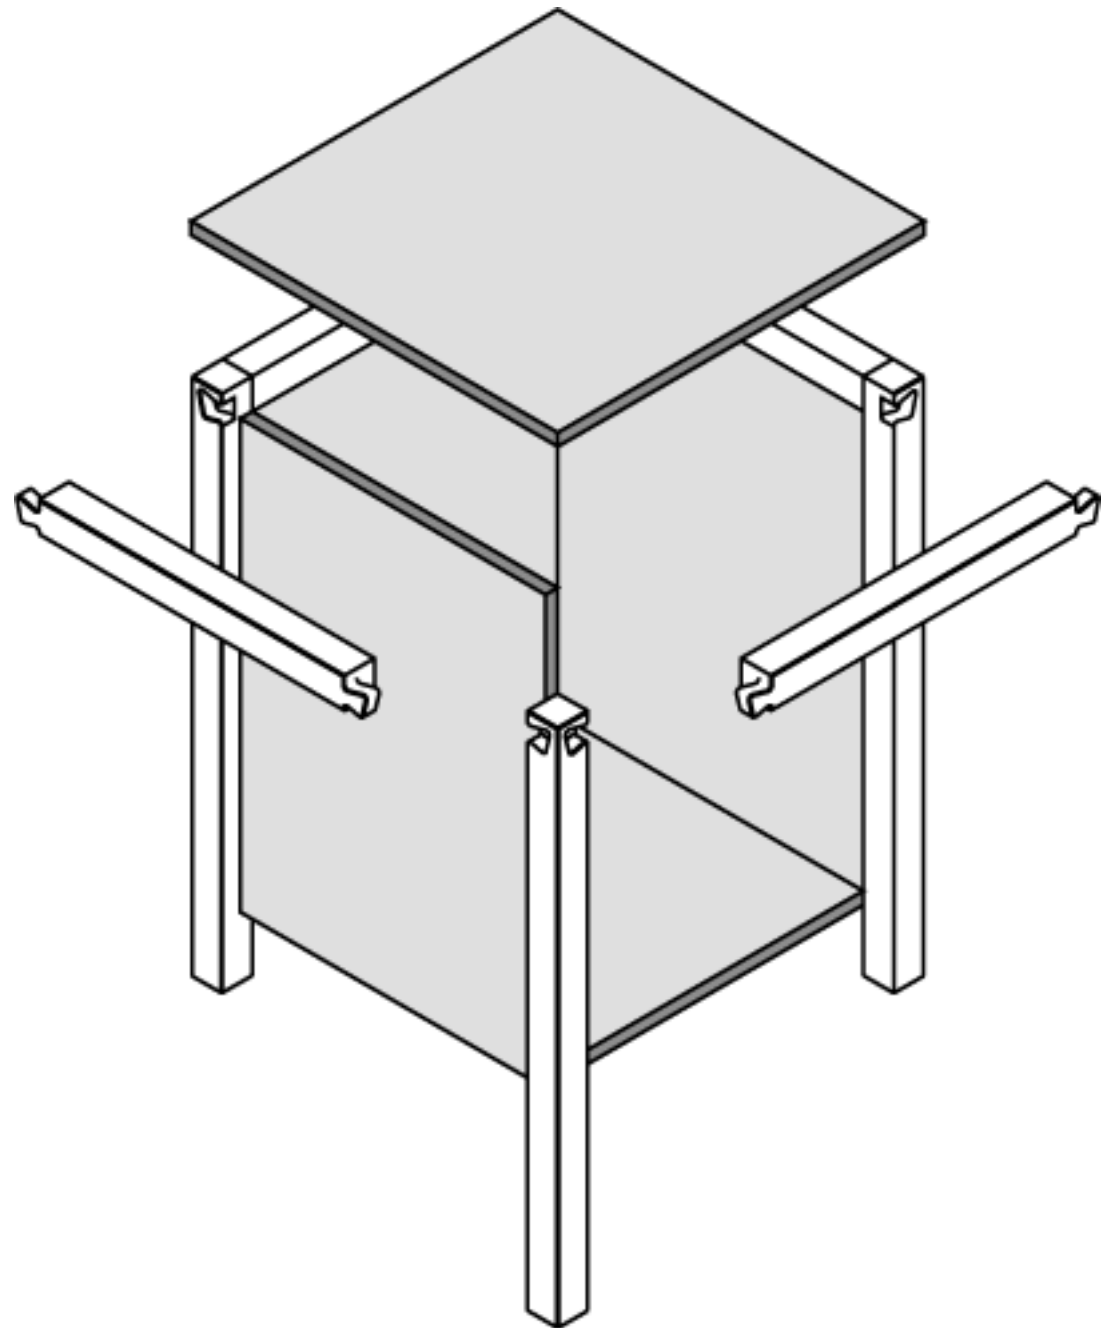

The principles of upright construction can be put to use for a number of furniture, like cabinet furniture and low tables.

Used wood joint

→ T_009 Halved Dovetail Corner

