


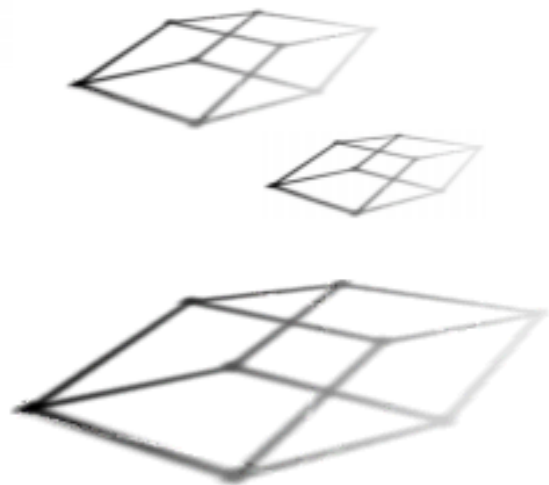

digital wood joints



Survey Frame Joints

Stop Labs

To open a file of the kind you need, just press the name of the appropriate folder (e. g. → DXF.10).

Name of the joint:

Name of file: in folder:

← Shouldered
Dovetail Halving

T_008 → DXF.10 – 2D → MicroStation → Velum 2.7 → Iges 5 → MBA_CAD Part 1 → MBA_SIM Part 1
→ DXF.12 – 3D → Minicad 7.0 → Velum 4.0 → MBA_CAD Part 2 → MBA_SIM Part 2

← Stop Lap with
Jigsaw Key

P_004 → DXF.10 – 2D → MicroStation → Velum 2.7 → Iges 5 → MBA_CAD Part 1 → MBA_SIM Part 1
→ DXF.12 – 3D → Minicad 7.0 → Velum 4.0 → MBA_CAD Part 2 → MBA_SIM Part 2
→ MBA_CAD Part 3 → MBA_SIM Part 3

← Hooked Jigsaw Halving

P_006 → DXF.10 – 2D → MicroStation → Velum 2.7 → Iges 5 → MBA_CAD Part 1 → MBA_SIM Part 1
→ DXF.12 – 3D → Minicad 7.0 → Velum 4.0 → MBA_CAD Part 2 → MBA_SIM Part 2

